



# DigiLand DL1010Q Rear Case Replacement

This guide is used as a prerequisite for other guides for this device. Before using any other DigiLand DL1010Q guides, please follow this guide first.

Written By: Tyler Rise



## INTRODUCTION

This guide will allow you to access the inside parts of this device


---



### TOOLS:

- [iFixit Opening Tools](#) (1)
  - [Phillips #00 Screwdriver](#) (1)
-

## Step 1 — Rear Case

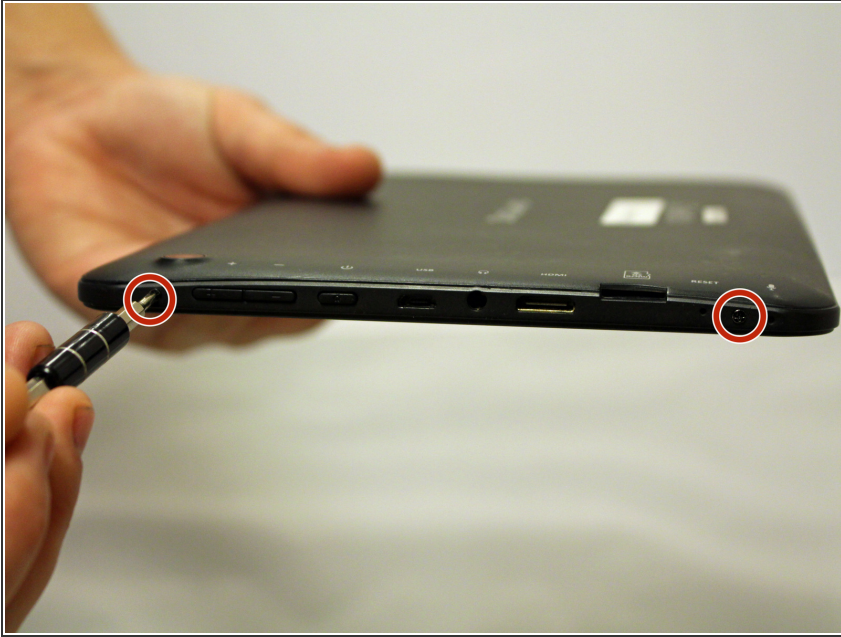

- With a J00 Philips head screwdriver, unscrew the two 4mm black screws located at the bottom of the device.

⚠ Before disassembling your device, be sure it is powered off.


## Step 2



- Using a plastic opening tool, begin softly prying open device by first inserting it in between the front and back panels.
- Continue prying the edges while moving around the device's perimeter until the back can be easily removed.



## Step 3

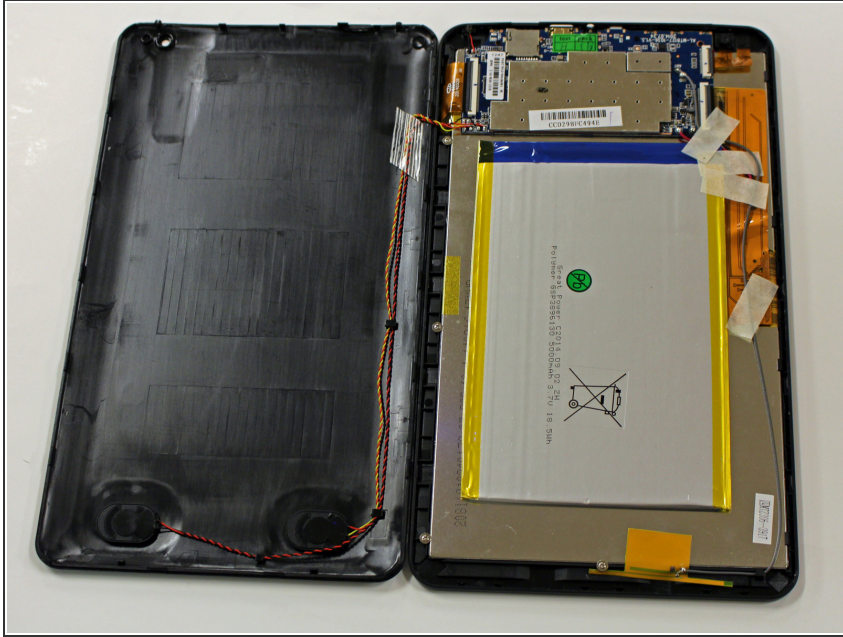

- Carefully lift back panel away from the body of the device.

⚠ Speaker wires are connected to both the front and back panel.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-19 12:23:13 AM.